


SuperFlow

Tabla de la presión **Español**



j2servid@j2servid.com

www.j2servid.com

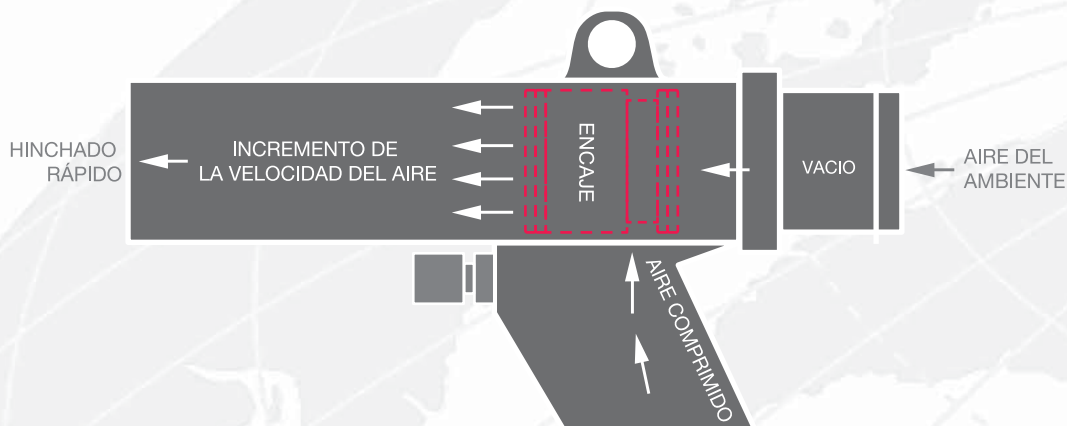

Negro

Inserto No. 1



Amarillo

Inserto No. 2

Presion de entra		Inserto No. 1		Inserto No. 2	
40 PSI	2,76 BAR	0,30 PSI	0,021 BAR	0,43 PSI	0,036 BAR
50 PSI	3,45 BAR	0,53 PSI	0,037 BAR	0,93 PSI	0,064 BAR
60 PSI	4,14 BAR	0,76 PSI	0,052 BAR	1,34 PSI	0,092 BAR
70 PSI	4,83 BAR	0,99 PSI	0,068 BAR	1,74 PSI	0,120 BAR
80 PSI	5,52 BAR	1,22 PSI	0,084 BAR	2,15 PSI	0,148 BAR
90 PSI	6,21 BAR	1,45 PSI	0,100 BAR	2,55 PSI	0,176 BAR
100 PSI	6,90 BAR	1,68 PSI	0,116 BAR	2,96 PSI	0,204 BAR
110 PSI	7,59 BAR	1,91 PSI	0,132 BAR	3,36 PSI	0,232 BAR
120 PSI	8,28 BAR	2,14 PSI	0,148 BAR	3,77 PSI	0,260 BAR