

WALNUT INDUSTRIES INC
 PO BOX 624, BENSALEM, PA 19020 USA
 TEL. 215.638.7847 FAX. 215.638.4939
 TOLL FREE 1.800.523.6536
 WWW.TY-GARD2000.COM

STEP 1




1. Cut two lengths of Ty-Gard 2000 for each band required. Then peel off the release liner and apply the exposed adhesive surface to the sidewall in the predetermined position.

TIP

As a general rule you can place the pre-measured bands of Ty-Gard on the sidewall when you have 4 rows of drums or 2 rows of pallets remaining to load.


STEP 2

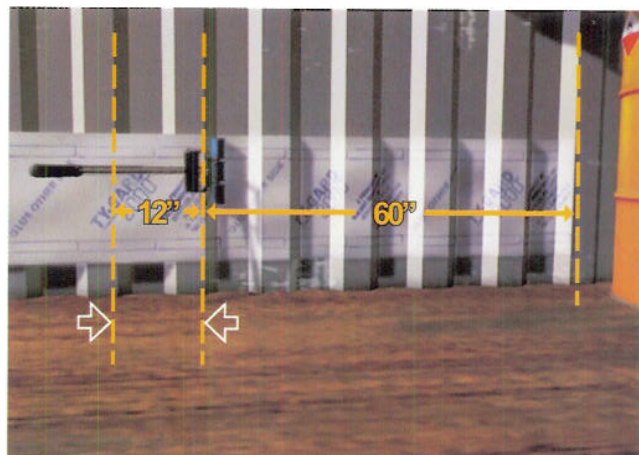

2. We suggest that the adhesive surface start at least 1ft (30cm) before the rear of the load. Ty-Gard 2000® should be parallel to the floor.

Using the bonding roller press firmly to the wall. Follow the same procedure for the opposite sidewall and bond to the contour of the corrugations.

STEP 3

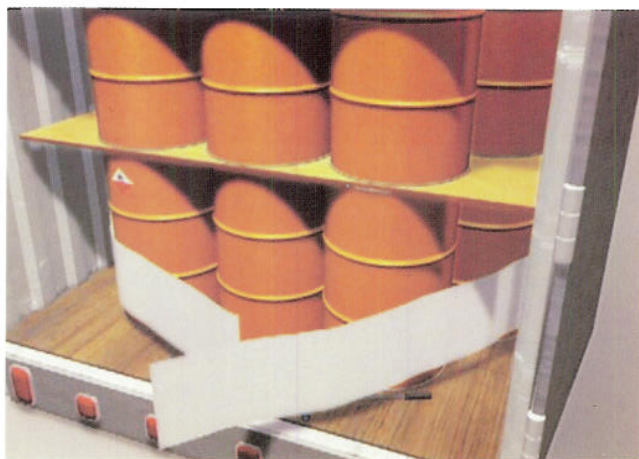


3. Finish loading cargo then pull the Ty-Gard 2000® strips across the face of the load overlapping ends approximately 1 ft (30cm). Cut excess if necessary.

TIP

Cargo should be stowed tightly and any remaining void spaces should be filled with approved material.

STEP 4

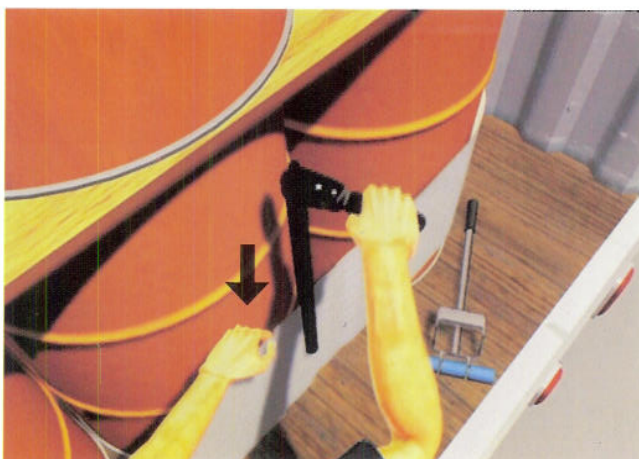

4. Next insert clothespin Ty-Tool® down through the overlapping portions.


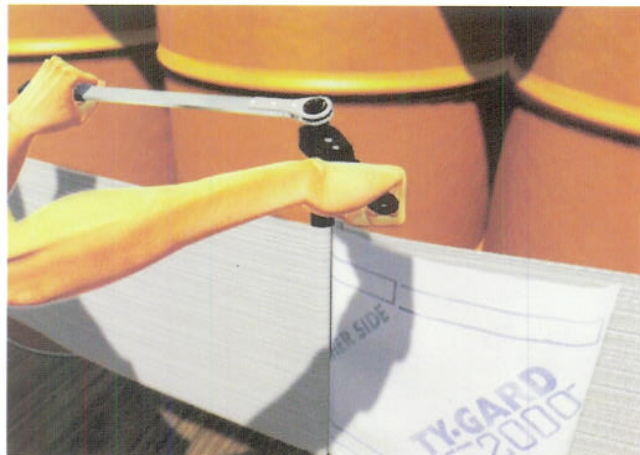
TIP

As a general rule for intermodal shipments we recommend that you apply 2 bands of Ty-Gard 2000® per layer of Cargo.

See reverse for more instructions →




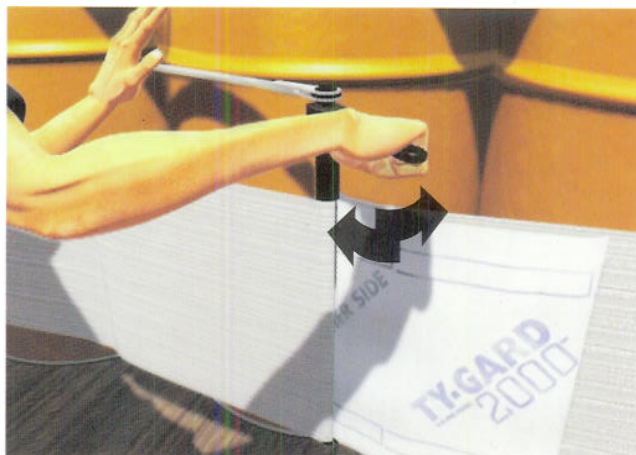
CALL 1-800-523-6536
 OR EMAIL: INFO@TY-GARD.COM
 TO RECEIVE A FREE TRAINING DVD


STEP 5




5. Place the long wrench on top and push the handle flush against the load.

TIP


Try to keep the Ty-Tool® as square as possible during tensioning.


STEP 6


6. Use the small wrench to tension.

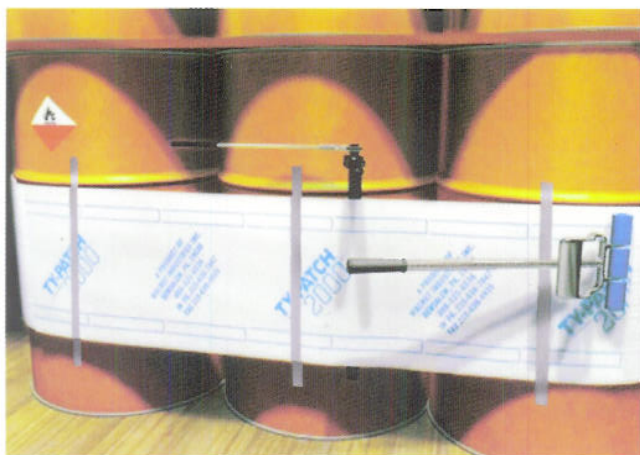
STEP 7


7. Remove release liner from the 5ft length of Ty-Patch and place across the tensioned Ty-Gard 2000® barrier using the bonding roller to assure proper adhesion. Use tape to attach Ty-Gard 2000® to the Cargo.


STEP 8


8. For easy disposal by receiver simply cut the Ty-Gard 2000® and remove the cargo. Peel the Ty-Gard towards the front of the container.

WALNUT
INDUSTRIES



WALNUT INDUSTRIES INC PO BOX 624, BENSALEM, PA 19020 USA
TEL. 215.638.7847 FAX. 215.638.4939

TOLL FREE 1.800.523.6536